

R-606053 - ROWLAND POWER PRO BLOCK INSTALL INSTRUCTIONS



Step 2

Step 1




With lower portion of block removed and screws loosened off. Hook the stainless steel bracket over the black support bracket



Then push the top portion into place on the frame rail

Step 3

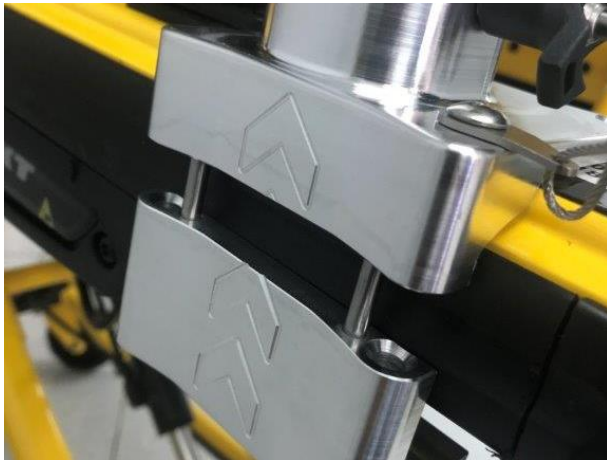

Add the lower block assembly lining up the guide pins – then adding the bolts provided

Step 4



Push the block up and add the securing bolts

